

Engine Relay Box (FN)			
Relay Number	Details	Loads	Schematic
RLYa	30A-1 Contact	Engine	<p>The schematic shows two relays, RLYa and RLYb, connected to a Battery. RLYa's coil is controlled by the ECU and its contacts control the Engine (F18) through a fuse (F19). RLYb's coil is also controlled by the ECU and its contacts connect to the Battery and Engine Loads.</p>
RLYb	30A-1 Contact	Fuel Pump	
1500-A	40A-1 Contact	Fan HS	<p>The schematic shows two relays, 1500-A and 1500-B, connected to a motor (M). Relay 1500-A (40A-1 Contact) and Relay 1500-B (30A-1 Contact) are both controlled by the ECU. The motor (M) is connected between the contacts of these two relays.</p>
1500-B	30A-1 Contact	Fan LS	