



UHC-F1	Fuel pump fuse (15A)	15A
UHC-F2	A/C compressor fuse (10A)	10A
UHC-F3	ABS valve fuse (25A)	25A
UHC-F4	Ignition switch 2 fuse (30A)	30A
UHC-F5	Rear defrost fuse (30A)	30A
UHC-F6	Front fog lamp fuse (15A)	15A
UHC-F7	Low beam fuse (15A)	15A
UHC-F8	High beam fuse (15A)	15A
UHC-F9	Start relay fuse (30A)	30A
UHC-F10	Main relay fuse (30A)	30A
UHC-F11	Horn fuse (10A)	10A
UHC-F12	NA	-
UHC-F13	Main relay load fuse (10A)	10A
UHC-F14	Ignition coil fuse (15A)	15A
UHC-F15	Oxygen sensor fuse (10A)	10A
UHC-F16	Nozzle fuse (10A)	10A
UHC-F17	Left low beam fuse (10A)	10A
UHC-F18	Right low beam fuse (10A)	10A
UHC-F19	Main relay output control signal fuse (5A)	
UHC-F20	NA	
UHC-F21	NA	
UHC-F22	NA	
UHC-F23	NA	
UHC-F24	NA	
UHC-F25	Backup fuse (10A)	10A
UHC-F26	Backup fuse (15A)	15A
UHC-F27	Backup fuse (30A)	30A
UHC-JF1	Fan fuse (40A)	40A
UHC-JF2	IEC power 1fuse (50A)	50A
UHC-JF3	Gearbox ECU fuse (50A)	50A
UHC-JF4	Braking pump motor fuse (40A)	40A
UHC-JF5	IG2 fuse (40A)	40A
UHC-JF6	IEC power 2 fuse (50A)	50A
UHC-JF7	Ignition switch 1 fuse (30A)	30A
UHC-JF8	NA	
UHC-JF9	Backup fuse (40A)	40A

R01	Cooling fan high relay (40A)
R02	Cooling fan low relay (40A)
R03	AMT relay (50A)
R04	NA
R05	Main relay (40A)
R06	Horn relay (30A)
R07	Start relay (30A)
R08	Oil pump relay (30A)
R09	A/C compressor (30A)
R10	Front fog lamp relay (30A)
R11	Low beam relay (30A)
R12	High beam relay (30A)