



Interconnector – P6L

1501005

Main					IC02A 16w GY	Engine				
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function
Starter	CCN	16W GY	2	1086	1	1086	1	1W BK	1010A	Starter
Gas Pressure Switch	FN	48W BR	F1	8055	2	8055	B23	90W BK	1320	Gas Pressure Switch
Gas Pressure Switch	8007	4W BR	3							
AC Request	CCN	40W GY	20	8054B	3	8054B	B52	90W BK	1320	AC Request
Not Used					4					Not Used
Fuel Guage Information	4310	6W BK	6	430	5	430	6	16W GY	IC02A	Fuel Guage Information
Fuel Guage Information	IC23C	16W BK	4	4301	6	430	5	16W GY	IC02A	Fuel Guage Information
Fuel Guage Information	4310	6W BK	5	431	7	431	8	16W GY	IC02A	Fuel Guage Information
Fuel Guage Information	IC23C	16W BK	13	E431	8	431	7	16W GY	IC02A	Fuel Guage Information
CNG	IC23C	16W BK	7	183	9					Not Used
CNG	IC23C	16W BK	8	184	10					Not Used
Not Used					11					Not Used
Not Used					12					Not Used
Fuel Pump Power (+)	4310	6W BK	3	121	13	121	E2	8W BK	BF00E	F19
Fan Relay Low	1500	10W BK	2A	1523	14	1523	A9	90W BK	1320	Fan Relay Low
Fan Relay High	1500	10W BK	2B	1525	15	1525	A10	90W BK	1320	Fan Relay High
Fan	1510	3W BK	1	1510	16	1510B	A45	90W BK	1320	Cooling Fan Diagnosis Signal Input
Fan Relay	1500	10W BK	5B							
Fan Resistor	1506	3W BK	1							

Interior					IC23C 16w BK	Main				
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function
Airbag Power Proteceted With F5	6570	50W BU	5	C06	1	C06	13	16W GY	CCN	StartSw 2,3 Output
Rear Wash Pump Switch (HB)	0005	11W GY	1A	517	2	517	A4	48W BR	FN	Rear Wash Pump Switch
Rear Wiper Switch (HB)	0005	11W GY	2A	526	3	526	E1	48W BR	FN	Rear Wiper Switch
Fuel Guage Information	CCN	40W BK	19	4301	4	4301	6	16W GY	IC02A	Fuel Guage Information
Front Wash Pump	CCN	16W BK	11	512	5	512	1	2W GN	5115	Front Wash Pump
Front Wash Pump	CCN	16W BK	10	513	6	513	2	2W GN	5115	Front Wash Pump
Not Used					7	183	9	16W GY	IC02A	CNG Tank Valve
Not Used					8	184	10	16W GY	IC02A	CNG Tank Valve
CAN L	CCN	40W WI	2	9019	9	9019	14	16W BK	C001	OBD Connector CAN L
							6	8W BK	8208	Immobilizer CAN L
							A3	48W BR	FN	Immobilizer CAN L
CAN H	CCN	40W WI	1	9020	10	9020	6	16W BK	C001	OBD Connector CAN L
							A2	48W BR	FN	Immobilizer CAN L
							5	8W BK	8208	Immobilizer CAN L
Airbag Diagnostic	6570	50W BU	9	6220	11	6220	13	16W BK	C001	OBD Connector For Airbag
Radio Code Reading With Diag	8410E	8W BK	15	9008	12	9008	11	16W BK	C001	OBD Connector For Radio
Fuel Guage Information	CCN	40W BK	12	E431	13	E431	8	16W GY	IC02A	Fuel Guage Information
FRH Door Switch	IC71	16W BK	14	6217	14	6217	16	40W GY	CCN	FRH Door Switch
RH Stop Lamp	2635	6W BK	2	213	15	213	4	16W GN	CCN	RH Stop Lamp
LH Stop Lamp	2630	6W BK	6	212	16	212	3	16W GN	CCN	LH Stop Lamp



Interconnector – P6L

1501005

Main					IC20A 9w BR	Dashboard					
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function	
F9	BF00C	8W BK	E4	B09	1A	B09	1B	9W BK	IC23B	Windows Lift Relay And Roof Lamp	
F5	BF00B	8W BK	E4	B05	2A	B05	2B	9W BK	IC23B	Windows Lift Relay And MFD	
Radio And Cigar Lighter Backlight	CCN	16W GY	7	B040	4A	B040	3B	9W BK	IC23B	Radio And Cigar Lighter Backlight	
Node Power (FN-ICN-MFD)	CCN	16W GY	15	B12	5A	B12	18	18W WI	ICN	ICN Power	
						CF10	2	18W WI	7215	MFD Power	
OBD Power	C001	16W BK	16	B03B	1B	B03B	1	18W WI	ICN	ICN Power	
IMMO&ICN&OBD Power	CCN	16W GN	2								
Immobilizer Power	8208	8W BK	1								
ABS Power	CCN	16W GY	12	A038	2B	A038	9	18W WI	ICN	ICN (ABS Logo)	
Immobilizer Power	8208	8W BK	3	146A	3B	146A	13	18W WI	ICN	Immobilizer Blinking	
RH Rear Indicator Lamp Command	CCN	16W GN	5	2343	4B	2343	4B	9W BK	IC23B	RH Rear Indicator Lamp	
Not Used					5B					Not Used	

Interior					IC23B 9w BK	Dashboard					
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function	
Evaporator Sensor	8006	2W BK	1	8051	1A	8051	8	18W WI	7215	Evaporator Sensor Information	
Rear Screen Heater	CCN	16W BK	9	811A	2A	811	5	7W GY	8080	Rear Screen Heater Switch	
Outside Temperature Sensor	IC71	16W BK	6	720	3A	720	9	18W WI	7215	Outside Temperature Sensor Value	
Not Used					4A					Not Used	
Window Lift Relay	6020	10W BK	A3	B09	1B	B09	1A	9W BR	IC20A	F9	
Boot Lamp	3105	2W WI	1	310							
Window Lift Relay	6020	10W BK	B3	B05	2B	B05	2A	9W BR	IC20A	F5	
						B111	1	18W WI	7215	MFD Power	
Radio	8410E	8W BK	12	B040	3B	B040	4A	9W BR	IC20A	Radio And Cigar Lighter	
Cigar lighter	8100	3W BK	2								
RH Rear Indicator Lamp	2635	6W BK	6	2343	4B	2343	4B	9W BR	IC20A	RH Rear Indicator Lamp Command	
Not Used					5B					Not Used	

Interior					IC23A 16w BK	Dashboard					
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function	
Start Switch 1,2 (Nonstep0)	CCN	40W BK	29	NS02	1	NS02	14	18W WI	ICN	Start Switch 1,2 (Nonstep0)	
Hazard Switch	CCN	40W WI	4	230	2	230	6	6W BK	2300	Hazard Switch	
Hazard Switch LED	CCN	40W BK	11	230B	3	230A	4	6W BK	2300	Hazard Switch LED	
MFD CAN L	CCN	40W WI	33	9071	4	9071	14	18W WI	7215	MFD CAN L	
Rear Screen Heater Switch	CCN	40W WI	19	8116	5	8116	7	7W GY	8080	Rear Screen Heater Switch	
AC Switch	CCN	40W WI	24	8054	6	8054	2	7W GY	8080	AC Switch	
AC Switch	CCN	40W WI	40								
ICN CAN H	CCN	40W WI	32	9052	7	9052	6	18W WI	ICN	CAN H	
Master Lock LED	CCN	40W WI	23	622	8	622	5	6W BK	2300	Master Lock LED	
V ECO	CCN	40W BK	22	8032	9	8032	1	7W GY	8080	V ECO For Ventilation Panel LED	
Isolator Switch	6120	9W YL	1								
Window Lift Relay	6020	10W BK	B1								
ICN CAN L	CCN	40W WI	31	9051	10	9051	7	18W WI	ICN	CAN L	
HVAC CAN H	CCN	40W WI	36	9062	11	9062	3	7W GY	8080	HVAC CAN H	
HVAC CAN L	CCN	40W WI	35	9061	12	9061	4	7W GY	8080	HVAC CAN L	
MFD CAN H	CCN	40W WI	34	9072	13	9072	10	18W WI	7215	MFD CAN H	
Displaying Airbag Status On ICN	6570	50W BU	7	6560	14	6560	12	18W WI	ICN	Displaying Airbag Status On ICN	
Displaying Airbag Status On ICN	6570	50W BU	8	6561	15	6561	11	18W WI	ICN	Displaying Airbag Status On ICN	
Blinker Output For Hazard Switch	CCN	40W BK	6	622A	16	622A	1	6W BK	2300	Blinker Output For Hazard Switch	



Interconnector – P6L

1501005

Engine					IC022 6W BK	INJECTOR						
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function		
Engine ECU (-)	1320	90W BK	B59	1321	1	1321	1	2W BK	1331	Injector 1 (ECU Earth)		
Engine ECU (-)	1320	90W BK	B89	1322	2	1322	1	2W BK	1332	Injector 2(ECU Earth)		
Oxygen Sensor	1350B	4W BK	3	1200	3	1320	2	2W BK	1331	Injector 1 (+)		
Ignition Coil	1135	6W BK	2				2	2W BK	1332	Injector 2 (+)		
Vegicle Speed Sensor	1620	3W WI	1				2	2W BK	1333	Injector 3 (+)		
Canister Discharge Electrovalve	1215	2W BR	2				2	2W BK	1334	Injector 4 (+)		
Main Relay	1304	10W BK	A5									
Engine ECU (+)	1320	90W BK	A66									
Not Used					4					Not Used		
Engine ECU (-)	1320	90W BK	B90	1323	5	1323	1	2W BK	1333	Injector 3 (ECU Earth)		
Engine ECU (-)	1320	90W BK	B60	1324	6	1324	1	2W BK	1334	Injector 4 (ECU Earth)		

Interior					IC70 16W BK	Fant Door LH											
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function							
FLH Electric Window Motor	6036P	7W BK	A4	6021	1	6071	1	2W GY	6040	FLH Electric Window Motor							
Doors Unlock	CCN	16W BK	8	6211	2	6211	5	6W BR	6202	FLH Door Lock Assembly							
FRH Door Lock Assembly	IC71	16W BK	2														
RLH Door Lock Assembly	IC72	14W BK	12														
RRH door Lock assembly	IC73	14W BK	12														
Boot Lock Motor (SD)	6260	2W WI	1														
Boot Lock Motor (HB)	IC82	16W BK	6														
FLH Door Lock (Switch)	CCN	40W WI	11	6207	3	6208	4	6W BR	6202	FLH Door Lock Assembly							
Rear Screen Heater (SD)	8120B	1W BK	1	813	4	813	2	10W BK	6410	LH View Mirror Heater							
Rear Screen Heater (HB)	IC82	16W BK	1														
RH View Mirror Heater	IC71	16W BK	4														
Rear Screen Heater	CCN	16W BK	9														
Radio	8410A	8W BK	6	8411	5	8431	2	2W BK	8420	FLH Door Speaker							
Not Used					6	720	3	10W BK	6410	LH View Mirror							
Not Used					7	E720	4	10W BK	6410	LH View Mirror							
FLH Window Winder Command	6036P	7W BK	B3	6011	8	6061	2	2W GR	6040	FLH Window Winder Motor							
Not Used					9					Not Used							
Ground		EC23		EC20C	10	E22A	2	6W BR	6202	FLH Door Lock Assembly Ground							
Roof Lamp Ground	3010	4W GN	4														
CCN Ground	CCN	40W BK	20														
RLH Door Lock Assembly Ground	IC72	14W BK	7														
Seat Belt Switch Ground	4730	2W WI	1														
Hand Brake Switch Ground	4400	2W BR	2														
Window Lift Relay Ground	6020	10W BK	A2														
Window Lift Relay Ground	6020	10W BK	B2														
Front Window Lift and Mirros Switch	6036C	18W BK	3								6401	11	6411	5	10W BK	6410	LH View Mirror
Front Window Lift and Mirros Switch	6036C	18W BK	1								6402	12	6412	7	10W BK	6410	LH View Mirror
Radio	8410A	8W BK	5	8410	13	8430	1	2W BK	8420	FLH Door Speaker							
FLH Door Lock (Switch)	CCN	40W WI	13	6219	14	6217	1	6W BR	6202	FLH Door Lock Assembly(Switch)							
Door Lock	CCN	16W BK	1	6201	15	620	3	6W BR	6202	FLH Door Lock Assembly(Switch)							
FRH Door Lock Assembly	IC71	16W BK	15														
RLH Door Lock Assembly	IC72	14W BK	5														
RRH door lock Assembly	IC73	14W BK	5														
Boot Lock Motor Only For HB	IC82	16W BK	5														
Electrical Mirror Switch	6036C	18W BK	5								6400	16	6410	6	10W BK	6410	LH View Mirror



Interconnector – P6L

1501005

Interior					IC71 16w BK	Fant Door RH											
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function							
FRH Electric Window Motor	6036P	7W BK	B1	6071	1	6071	1	2W GY	6045	FRH Electric Window Motor							
Doors Unlock	CCN	16W BK	8	6212	2	6211	5	6W BR	6207	FRH Door Lock Assembly							
FLH Door Lock Assembly	IC70	16W BK	2														
RLH Door Lock Assembly	IC72	14W BK	12														
RRH door Lock assembly	IC73	14W BK	12														
Boot Lock Motor (SD)	6260	2W WI	1														
Boot Lock Motor (HB)	IC82	16W BK	6														
FRH Door Lock (Switch)	CCN	40W BK	17	6208	3	6208	4	6W BR	6207	FRH Door Lock Assembly							
Rear Screen Heater (SD)	8120B	1W BK	1	814	4	813	2	10W BK	6415	RH View Mirror Heater							
Rear Screen Heater (HB)	IC82	16W BK	1														
LH View Mirror Heater	IC70	16W BK	4														
Rear Screen Heater	CCN	16W BK	9														
Radio	8410A	8W BK	4	8431	5	8431	2	2W BK	8425	FRH Door Speaker							
Outside Temperature Sensor Value	IC23B	9W BK	3A	720	6	720	3	10W BK	6415	RH View Mirror							
Ground	EC22			E720	7	E720	4	10W BK	6415	RH View Mirror							
FRH Door Lock Assembly Ground	IC71	16W BK	10														
Radio Ground	8410E	8W BK	9														
RRH Door Lock Assembly Ground	IC73	14W BK	7														
RLH Window Lift Switch Gruond	6100	7W GN	A1														
RLH Window Lift Switch Gruond	6100	7W GN	A4														
RRH Window Lift Switch Gruond	6105	7W BK	A1														
RRH Window Lift Switch Gruond	6105	7W BK	A4														
RLH Window Lift Switch Gruond	6100	7W GN	B3														
RRH Window Lift Switch Gruond	6105	7W BK	B3														
Cigar Lighter Lamp Ground	3053	2W YL	2														
Cigar Lighter Ground	8100	3W BK	3														
Front Window Lift And Mirror Switch	6036P	7W BK	B2								6061	8	6061	2	2W GR	6045	FRH Window Winder Motor
Not Used											9						
Ground	EC22			EC22P	10	E22A	2	6W BR	6207	FRH Door Lock Assembly Gruond							
FRH Door Lock Assembly Ground	IC71	16W BK	7														
Radio Ground	8410E	8W BK	9														
RRH Door Lock Assembly Ground	IC73	14W BK	7														
RLH Window Lift Switch Gruond	6100	7W GN	A1														
RLH Window Lift Switch Gruond	6100	7W GN	A4														
RRH Window Lift Switch Gruond	6105	7W BK	A1														
RRH Window Lift Switch Gruond	6105	7W BK	A4														
RLH Window Lift Switch Gruond	6100	7W GN	B3			E22B	1	10W BK	6415	RH View Mirror Gound							
RRH Window Lift Switch Gruond	6105	7W BK	B3														
Cigar Lighter Lamp Ground	3053	2W YL	2														
Cigar Lighter Ground	8100	3W BK	3														
Electrical Mirror Switch	6036C	18W BK	4								6411	11	6411	5	10W BK	6415	RH View Mirror
Electrical Mirror Switch	6036C	18W BK	2								6412	12	6412	7	10W BK	6415	RH View Mirror
Radio	8410A	8W BK	3	8430	13						8430	1	2W BK	8425	FRH Door Speaker		
FRH Door Lock (Switch)	IC23C	16W BK	14	6217	14	6217	1	6W BR	6207	FRH Door Lock Assembly(Switch)							
Door Lock	CCN	16W BK	1	6202	15	620	3	6W BR	6207	FRH Door Lock Assembly(Switch)							
FLH Door Lock Assembly	IC70	16W BK	15														
RLH Door Lock Assembly	IC72	14W BK	5														
RRH door lock Assembly	IC73	14W BK	5														
Boot Lock Motor Only For HB	IC82	16W BK	5														
Electrical Mirror Switch	6036C	18W BK	14								6410	16	6410	6	10W BK	6415	RH View Mirror



Interconnector – P6L

1501005

Interior					IC72 14w BK	Rear Door LH					
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function	
Radio (HB And SD)	8410A	8W BK	7	8450A	1	8470	1	2W BK	8430	RLH Door Speaker	
Radio (Rear Speaker) (SD)	8430A	2W BK	1	8450B							
Radio (HB And SD)	8410A	8W BK	8	8451A	2	8471	2	2W BK	8430	RLH Door Speaker	
Radio (Rear Speaker) (SD)	8430A	2W BK	2	8451B							
Not Used					3					Not Used	
Not Used					4					Not Used	
Door Lock	CCN	16W BK	1	6203	5	620	5	5W BR	6212	RLH Door Lock Assembly	
FLH Door Lock Assembly	IC70	16W BK	15								
FRH Door Lock Assembly	IC71	16W BK	15								
RRH door lock Assembly	IC73	14W BK	5								
Boot Lock Motor Only For HB	IC82	16W BK	5								
Not Used					6					Not Used	
Gruond	EC23			E220	7	MC20S	3	5W BR	6212	RLH Door Lock Assembly Ground	
Roof Lamp Ground	3010	4W GN	4								
CCN Gruond	CCN	40W BK	20								
FLH Door Lock Assembly Ground	IC70	16W BK	10								
Seat Belt Switch Gruond	4730	2W WI	1								
Hand Brake Switch Gruond	4400	2W BR	2								
Window Lift Relay Ground	6020	10W BK	A2								
Window Lift Relay Ground	6020	10W BK	B2								
RLH Window Lift Switch	6100	7W GN	B4								6111
RLH Window Lift Switch	6100	7W GN	B1	6121	9	6171	1	2W GY	6130	RLH Window Winder Mototr	
Not Used					10					Not Used	
Not Used					11					Not Used	
Doors Unlock	CCN	16W BK	8	6213	12	6211	4	5W BR	6212	RLH Door Lock Assembly	
FLH Door Lock Assembly	IC70	16W BK	2								
FRH Door Lock Assembly	IC71	16W BK	2								
RRH door Lock assembly	IC73	14W BK	12								
Boot Lock Motor (SD)	6260	2W WI	1								
Boot Lock Motor (HB)	IC82	16W BK	6								
Not Used					13	622	2	5W BR	6212	RLH Door Lock Assembly	
RLH Door Switch Input	CCN	40W BK	15	6288	14	6287	1	5W BR	6212	RLH Door Lock Assembly	

Drawn by: Engineering Dep. of ISACO

2014/10/11



Interconnector – P6L

1501005

Interior					IC73 14w BK	Rear Door RH					
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function	
Radio (HB And SD)	8410A	8W BK	1	8470A	1	8470	1	2W BK	8435	RRH Door Speaker	
Radio (Rear Speaker) (SD)	8435A	2W BK	1	8470B							
Radio (HB And SD)	8410A	8W BK	2	8471A	2	8471	2	2W BK	8435	RRH Door Speaker	
Radio (Rear Speaker) (SD)	8435A	2W BK	2	8471B							
Not Used					3					Not Used	
Not Used					4					Not Used	
Door Lock	CCN	16W BK	1	6204	5	620	5	5W BR	6217	RRH Door Lock Assembly	
FLH Door Lock Assembly	IC70	16W BK	15								
FRH Door Lock Assembly	IC71	16W BK	15								
RLH door lock Assembly	IC72	14W BK	5								
Boot Lock Motor Only For HB	IC82	16W BK	5								
Not Used					6					Not Used	
Ground	EC22			E221	7	MC20S	3	5W BR	6217	RRH Door Lock Assembly Ground	
FRH Door Lock Assembly Ground	IC71	16W BK	10								
Radio Ground	8410E	8W BK	9								
FRH Door Lock Assembly Ground	IC71	16W BK	7								
RLH Window Lift Switch Gruond	6100	7W GN	A1								
RLH Window Lift Switch Gruond	6100	7W GN	A4								
RRH Window Lift Switch Gruond	6105	7W BK	A1								
RRH Window Lift Switch Gruond	6105	7W BK	A4								
RLH Window Lift Switch Gruond	6100	7W GN	B3								
RRH Window Lift Switch Gruond	6105	7W BK	B3								
Cigar Lighter Lamp Ground	3053	2W YL	2								
Cigar Lighter Ground	8100	3W BK	3								
RRH Window Lift Switch	6105	7W BK	B4								6161
RRH Window Lift Switch	6105	7W BK	B1	6171	9	6171	1	2W GY	6135	RRH Window Winder Mototr	
Not Used					10					Not Used	
Not Used					11					Not Used	
Doors Unlock	CCN	16W BK	8	6214	12	6211	4	5W BR	6217	RRH Door Lock Assembly	
FLH Door Lock Assembly	IC70	16W BK	2								
FRH Door Lock Assembly	IC71	16W BK	2								
RLH door Lock assembly	IC72	14W BK	12								
Boot Lock Motor (SD)	6260	2W WI	1								
Boot Lock Motor (HB)	IC82	16W BK	6								
Not Used					13	622	2	5W BR	6217	RRH Door Lock Assembly	
RRH Door Switch Input	CCN	40W BK	16	6287	14	6287	1	5W BR	6217	RRH Door Lock Assembly	



Interconnector – P6L

1501005

Interior					IC77 2w GN	Passenger Airbag					
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function	
Only For Vehicle With Passenger Airbag	6750	50W BU	18	6510	1	6510	1	2W BK	6564	Passenger Airbag module	
Only For Vehicle With Passenger Airbag	6750	50W BU	19	6511	2	6511	2	2W BK	6564	Passenger Airbag module	
Interior ((only HB))					IC82 16w BK	Tailgate					
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function	
Rear Screen Heater (SD)	8120B	1W BK	1	811	1	811	1	1W BK	8120B	Rear Screen Heater (HB)	
RH View Mirror Heater	IC71	16W BK	4								
LH View Mirror Heater	IC70	16W BK	4								
Rear Screen Heater	CCN	16W BK	9								
Brake Pedal Switch	CCN	16W BK	4	214	2	214	1	3W BK	2110	Additional Stop Lamp	
Plate Number Lamp	CCN	40W BK	38	V094	3	V1806	1	2W BK	2636	Number Plate Lamp	
						V1805	1	2W BK	2633	Number Plate Lamp	
Trunk Lid Lamp	3105	2W WI	2	E310B	4	319	1A	2W BK	3100	Contact Switch For Trunk	
Door Lock	CCN	16W BK	1	6205	5	6206	1	2W WI	6260	Boot Lock Motor	
FLH Door Lock Assembly	IC70	16W BK	15								
FRH Door Lock Assembly	IC71	16W BK	15								
RLH door lock Assembly	IC72	14W BK	5								
RRH door lock Assembly	IC73	14W BK	5								
Doors Unlock	CCN	16W BK	8	6215	6	6216	2	2W WI	6260	Boot Lock Motor	
FLH Door Lock Assembly	IC70	16W BK	2								
FRH Door Lock Assembly	IC71	16W BK	2								
RLH door Lock assembly	IC72	14W BK	12								
Boot Lock Motor (SD)	6260	2W WI	1								
RRH door Lock assembly	IC73	14W BK	12								
Not Used											
Not Used					8					Not Used	
Rear Wiper	CCN	16W BK	15	521	9	521	1	3W WI	5215	Rear Wiper	
Rear Wiper Zero Position	CCN	40W WI	28	522	10	522	2	3W WI	5215	Rear Wiper	
Not Used					11					Not Used	
Not Used					12					Not Used	
Not Used					13					Not Used	
Not Used					14					Not Used	
Not Used					15					Not Used	
Not Used					16					Not Used	



Interconnector - P6L	1501005
----------------------	---------

Interior					IC8060A 6w BK	Air condition				
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function
Evaprator Sensor	FN	32W GY	H4	8079	1	8079	2	2W BK	8006	Evaprator Sensor
Grand		EC50		E8052	2	E8052	1	2W BK	8006	Evaprator Sensor grand
AC switch power (IGN)	CCN	2W BK	2	8031	3	26	1	10W BK	8030	AC switch power (IGN)
						6/28	1	2W BK	8050	
						26/28	A1	6W BK	8045	
Grand		EC50		E802	4	8	A3	6W BK	8050	Blower motor Grand
Not Used					5					Not Used
Not Used					6					Not Used

Drawn by: Engineering Dep. of ISACO	2014/10/11
-------------------------------------	------------